



OVER THE RANGE MICROWAVE OVEN

SAFETY INFORMATION 3

USING THE OVEN

Features	7
Controls.....	8
Time and Auto Microwave Features	10
Sensor Microwave Features	13
Other Features	17
Microwave Terms.....	18

CARE AND CLEANING

Inside	19
Outside.....	19

TROUBLESHOOTING 20

WARRANTY21

CONSUMER SUPPORT22

OWNER'S MANUAL

JVM2185
DVM2185

Write the model and serial
numbers here:

Model # _____

Serial # _____

Find these numbers on a
label inside the oven.

THANK YOU FOR MAKING GE APPLIANCES A PART OF YOUR HOME.

Whether you grew up with GE Appliances, or this is your first, we're happy to have you in the family.

We take pride in the craftsmanship, innovation and design that goes into every GE Appliances product, and we think you will too. Among other things, registration of your appliance ensures that we can deliver important product information and warranty details when you need them.

Register your GE appliance now online. Helpful websites and phone numbers are available in the Consumer Support section of this Owner's Manual. You may also mail in the pre-printed registration card included in the packing material.



GE APPLIANCES

IMPORTANT SAFETY INFORMATION

READ ALL INSTRUCTIONS BEFORE USING THE APPLIANCE

⚠ WARNING

To reduce the risk of burns, electric shock, fire, injury to persons, or exposure to excessive microwave energy:

When using electrical appliances, basic safety precautions should be followed, including the following:

- Read all instructions before using this appliance.
- Read and follow the specific precautions in the PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY section on page 6.
- Use this appliance only for its intended use as described in this manual. Do not use corrosive chemicals or vapors in this appliance. This oven is specifically designed to heat, dry or cook food, and is not intended for laboratory or industrial use.
- This microwave must only be serviced by qualified service personnel. Contact nearest authorized service facility for examination, repair or adjustment.

INSTALLATION

- Install or locate this appliance only in accordance with the provided installation instructions.
- This appliance must be grounded. Connect only to properly grounded outlet. See "GROUNDING INSTRUCTIONS" found on page 5.
- This microwave oven is UL listed for installation over both gas and electric ranges.
- This unit is suitable for use above gas or electric cooking equipment, 36" or less wide.
- Do not operate this appliance if it has a damaged power cord or plug, if it is not working properly, or if it has been damaged or dropped.
- Keep cord away from heated surfaces.
- Do not let cord hang over the edge of the table or counter
- Do not immerse cord or plug in water.
- Do not cover or block any openings on the appliance.
- Do not store this appliance outdoors. Do not use this product near water—for example, in a wet basement, near a swimming pool, near a sink or in similar locations.
- Do not mount this appliance over a sink.

TO REDUCE THE RISK OF FIRE IN THE CAVITY:

- Do not overcook food. Carefully attend appliance when paper, plastic or other combustible materials are placed inside the oven to facilitate cooking.
- Remove wire twist-ties and metal handles from paper or plastic containers before placing them in the oven.
- Do not store any materials, other than our recommended accessories, in this oven when not in use. Do not leave paper products, cooking utensils or food in the cavity when not in use. Microwave rack should be removed from oven when not in use.
- If materials inside the oven ignite, keep the oven door closed, turn the oven off and disconnect the power cord or shut off power at the fuse or circuit breaker panel.
- Do not operate the microwave feature without food in the oven.

TO REDUCE THE RISK OF BURNS:

- Be careful when opening containers of hot food. Use pot holders and direct steam away from face and hands.
- Vent, pierce, or slit containers, pouches, or plastic bags to prevent build-up of pressure.
- Be careful when touching the turntable, door, racks, or walls of the oven which may become hot during use.
- Liquids and certain foods heated in the microwave oven can present a risk of burn when removing them from the microwave. The potential for a burn is greater in young children, who should not be allowed to remove hot items from the microwave.

READ AND SAVE THESE INSTRUCTIONS

IMPORTANT SAFETY INFORMATION

READ ALL INSTRUCTIONS BEFORE USING THE APPLIANCE

WARNING

Continued

OPERATING AND CLEANING

- As with any appliance, close supervision is necessary when used by children.
- Do not store anything directly on top of the microwave oven surface when the microwave oven is in operation.
- Oversized foods or oversized metal utensils should not be inserted in a microwave/convection oven as they may create a fire or risk of electric shock.
- Do not clean with metal scouring pads. Pieces can burn off the pad and touch electrical parts involving a risk of electric shock.
- Do not use paper products in oven when appliance is operating in any cooking mode except microwave.
- Some products such as whole eggs and sealed containers—for example, closed jars—are able to explode and should not be heated in this microwave oven.
- Do not cover any part of the microwave with metal foil. This will cause overheating of the microwave oven.
- Cook meat and poultry thoroughly— meat to at least an INTERNAL temperature of 160°F, and poultry to at least an INTERNAL temperature of 180°F. Cooking to these temperatures usually protects against foodborne illness.
- Make sure all cookware used in your microwave oven is suitable for microwaving. Most glass casseroles, cooking dishes, measuring cups, custard cups, pottery or china dinnerware which does not have metallic trim or glaze with a metallic sheen can be used in compliance with cookware manufacturers' recommendations.
- It is important to keep the area clean where the door seals against the microwave. Use only mild, nonabrasive detergents applied with a clean sponge or soft cloth. Rinse well.

SUPER HEATED WATER

- Liquids, such as water, coffee, or tea, are able to be overheated beyond the boiling point without appearing to be boiling. Visible bubbling or boiling when the container is removed from the microwave oven is not always present. **THIS COULD RESULT IN VERY HOT LIQUIDS SUDDENLY BOILING OVER WHEN THE CONTAINER IS DISTURBED OR A SPOON OR OTHER UTENSIL IS INSERTED INTO THE LIQUID.**
- To reduce the risk of injury to persons:
 - Do not overheat the liquid.
 - Stir the liquid both before and halfway through heating it.
 - Do not use straight-sided containers with narrow necks.
 - After heating, allow the container to stand in the microwave oven for a short time before removing the container.
 - Use extreme care when inserting a spoon or other utensil into the container.

READ AND SAVE THESE INSTRUCTIONS

IMPORTANT SAFETY INFORMATION

READ ALL INSTRUCTIONS BEFORE USING THE APPLIANCE

GROUNDING INSTRUCTIONS

⚠ WARNING To prevent risk of electric shock, follow these instructions:

- Plug microwave into a grounded 3-prong outlet.
- Do not remove the ground prong or use an adapter.
- Do not use an extension cord.

Improper use of the grounding plug can result in a risk of electric shock.

This appliance must be grounded. In the event of an electrical short circuit, grounding reduces the risk of electric shock by providing an escape wire for the electric current.

This appliance is equipped with a power cord having a grounding wire with a grounding plug. The plug must be plugged into an outlet that is properly installed and grounded.

Consult a qualified electrician or service technician if the grounding instructions are not completely understood, or if doubt exists as to whether the appliance is properly grounded.

A short power-supply is provided to reduce the risks resulting from becoming entangled or tripping over a longer cord. Do not use an extension cord with this appliance. If the power cord is too short, have a qualified electrician or service technician install an outlet near the appliance.

VENT FAN

The fan will operate automatically under certain conditions. Take care to prevent the starting and spreading of accidental cooking fires while the vent fan is in use.

- Clean the underside of the microwave often. Do not allow grease to build up on the microwave or the fan filters.
- In the event of a grease fire on the surface units below the microwave oven, smother a flaming pan on the surface unit by covering the pan completely with a lid, a cookie sheet or a flat tray.
- Use care when cleaning the vent fan filters. Corrosive cleaning agents, such as lye-based oven cleaners, may damage the filters.

- When preparing flaming foods under the microwave, turn the fan on.
- Never leave surface units beneath your microwave oven unattended at high heat settings. Boilovers cause smoking and greasy spillovers that may ignite and spread if the microwave vent fan is operating. To minimize automatic fan operation, use adequate sized cookware and use high heat on surface units only when necessary.

PACEMAKERS

Most pacemakers are shielded from interference from electronic products, including microwaves. However, patients with pacemakers may wish to consult their physicians if they have concerns.

READ AND SAVE THESE INSTRUCTIONS

IMPORTANT SAFETY INFORMATION

READ ALL INSTRUCTIONS BEFORE USING THE APPLIANCE


PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY

- (a) **Do Not Attempt** to operate this oven with the door open since open-door operation can result in harmful exposure to microwave energy. It is important not to defeat or tamper with the safety interlocks.
- (b) **Do Not Place** any object between the oven front face and the door or allow soil or cleaner residue to accumulate on sealing surfaces.
- (c) **Do Not Operate** the oven if it is damaged. It is particularly important that the oven door close properly and that there is no damage to the:
 - (1) door (bent),
 - (2) hinges and latches (broken or loosened),
 - (3) door seals and sealing surfaces.
- (d) **The Oven Should Not** be adjusted or repaired by anyone except properly qualified service personnel. Contact nearest authorized service facility for examination, repair or adjustment.

READ AND SAVE THESE INSTRUCTIONS

Features

Throughout this manual, features and appearance may vary from your model.

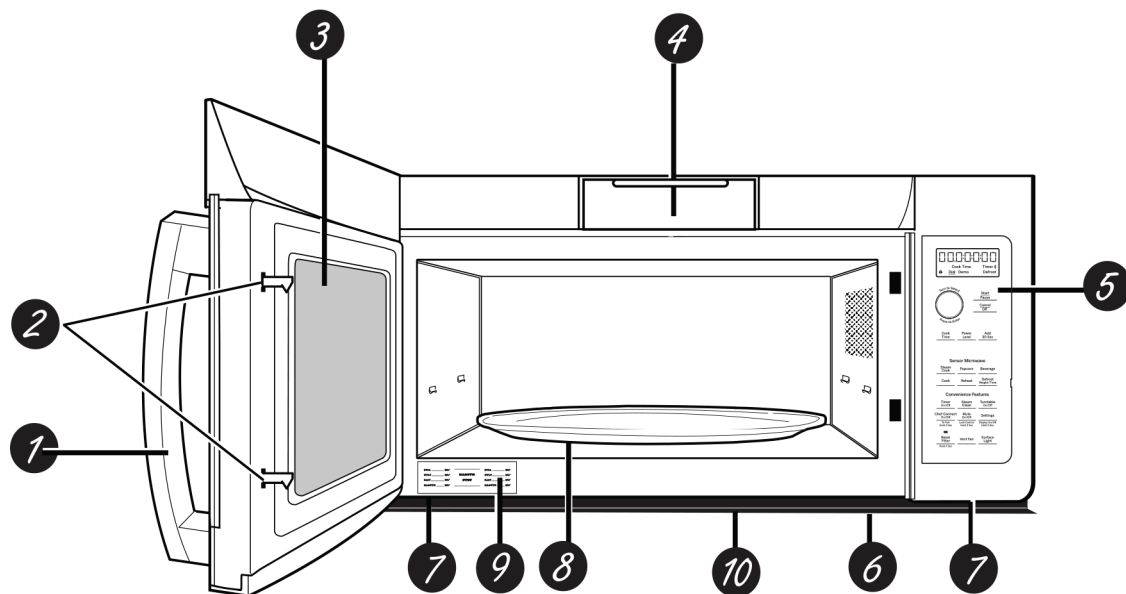

- 1 Door Handle.** Pull to open the door. The door must be securely latched for the microwave to operate.
- 2 Door Latches.**
- 3 Window with Metal Shield.** Screen allows cooking to be viewed while keeping microwaves confined in the oven.
- 4 Charcoal Filter Door.** Push down two button to open the door. You can change charcoal filter easily.
- 5 Control Panel and Selector Dial.**
- 6 Cooktop Light.**

- 7 Grease Filter.**
 - 8 Removable Turntable.** Turntable and support **must** be in place when using the oven. The turntable may be removed for cleaning.
 - 9 Rating Plate.**
 - 10 Deflector.** Provides robustness from cooktop heat. Do not remove.
- NOTE:** Oven vent(s) and oven light are located on the inside walls of the microwave oven.

Controls


Throughout this manual, features and appearance may vary from your model.

Microwave Cooking Time and Auto Features

Press	Turn and push dial to enter
Cook Time	Amount of cooking time
Press once (Cook Time I) to microwave any time between 15 seconds and 99 minutes.	
Press twice (Cook Time II) to change power levels automatically during cooking.	
Power Level	Power level 1–10
Add 30 sec.	Starts immediately!
Defrost Weight/Time	
Press once (Weight Defrost)	Food weight up to six pounds
Press twice (Timed Defrost)	Amount of defrosting time
Beverage	Starts immediately!

Sensor Features

Press	Turn and push dial to enter	Option
Steam Cook/Food Typ	Food Type	
Popcorn	Starts immediately!	
Cook	Food Type	
Reheat	Food Type	
Pizza	Food Type	
Potato	Food Type	
Meat	Food Type	
Veggies	Food Type	
Butter	Food Type	

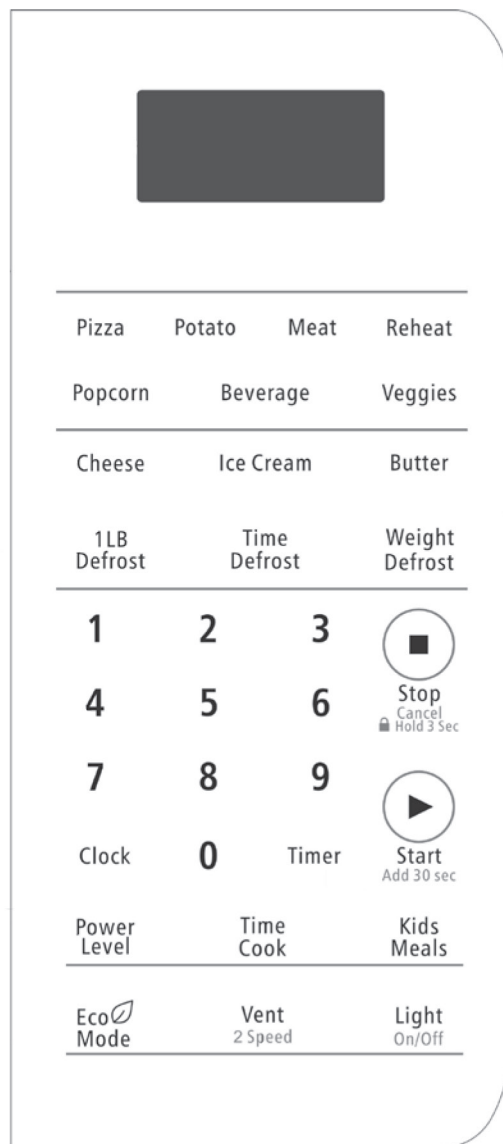

Time and Auto Microwave Features

BASIC CONTROLS

Learn about your microwave oven.

CAUTION

- To avoid risk of personal injury or property damage, do not operation the microwave oven empty.
- To avoid risk of personal injury or property damage, do not use stoneware, aluminum foil, metal utensils, or mental trimmed utensils in the microwave oven.

Function description:

- During cooking, if press **Stop/Cancel** pad once or open the door, the program will bepaused, close the door and then press **Start/Add 30Sec** pad to resume, but if press **Stop/Cancel** pad twice, the program will be canceled.
- After ending cooking, “END” will display and the system will sound beeps to remind user every two minutes until user press **Stop/Cancel** pad or open the door.
- SIGNALS DURING OVEN SETTINGS
ONE SIGNAL: Oven accepts the entry.
TWO SIGNALS: Oven does not accept the entry, please check and try again.

Setting the Clock

Example: Suppose you want to set the clock for 5:00 pm.

- In standby mode, press **Clock** pad once, “Enter Time of Day” will cycle display.
- Press number pad enter time.
- Press **Start/Add 30Sec** to confirm. The display cycle shows “AM Press 1 PM Press 2”.
- Press number pads “2”. “PM 5:00” will display.
- Press **Start/Add 30Sec** to confirm.

NOTE: This is a clock in 12 hour cycle. For initial power-up, “AM 12:00” will display. During cooking, you can press CLOCK pad to check the current time of the clock.

Setting Microwave cooking program

For microwave cooking, cooking power level and time should be set. The longest cooking time you can set is 99 minutes and 99 seconds. Press **Power Level** pad once and then press number pads to choose cooking power level.

Use number pad to choose cooking power level			
Number pad	Number pad	Number pad	Percent (Name)
1,0	100% (High)	4	40% (Medium Low)
9	90% (Sauté)	3	30% (Defrost)
8	80% (Reheat)	2	20% (Low)
7	70% (Medium High)	1	10% (Warm)
6	60% (Simmer)	0	0% (No Power)
5	50% (Medium)		

Time and Auto Microwave Features

For example, suppose you want to cook at 80% power level for 10 minutes.

1. Press **Time Cook** pad once.
2. Use the number pads to enter cooking time.
3. Press **Power Level** pad once, "Enter the Power Level" will cyclic display, and then use the numberpad "8" to select 80% power level.
4. Press **Start/Add 30Sec** pad to confirm.

NOTE: During cooking you can press **Power level** to check the power level, and you can adjust the power level by pressing number pads when the display shows the power level.

Multi stage cooking

For best results, some recipes call for different cook power during different stages of a cook cycle. You can program your oven to switch from one power to another for up to 2 stages.

For example, suppose you want to set the following cooking program.

Microwave cooking



Microwave cooking

1. In waiting mode, input the first Microwave cooking. Do not press **Start/Add 30Sec** pad
2. Press **Time Cook** pad once, and then input the second Microwave cooking.
3. Press **Start/Add 30Sec** to start.

Light Control

This feature is designed for the convenience of doing things outside the oven. To turn on the light at the bottom of the oven, press **Light On/Off** pad:

Press Light On/Off button	Working Mode
Once	Light
Twice	Dark
3 times	Off

Vent Fan Control

Your oven can be used as a range hood. When it is turned on, the fan motor starts filtering out smoke, odors, and grease generated from cooking.

In standby mode, the vent fan is manual control, press **Vent/4 Speed** pad to select the vent speed by manual:

Press Vent/4 Speed button	Working Mode
Once	Strong Wind
Twice	High Wind
3 times	Medium wind
4 times	Low wind
5 times	Turn off

Time and Auto Microwave Features

NOTE: In the fan opened mode, if you start cooking, the suction fan automatically turns into high wind gear and only the high wind gear and the closing gear can be used.

Vent Delay off

1. Under the vent fan open, press **Vent Delay Off** pad once, "Enter Time" will display.
2. Use the number pads to enter the delay closing time.
3. Press **Vent Delay Off** pad to confirm.

NOTE:

- The longest delay off time you can set is 99 minutes and 99 seconds.
- Before the end of the countdown, you can press Vent Delay Off pad to check the countdown and you can cancel the function by pressing Stop/Cancel pad when the display show the countdown.
- By the end of the countdown, all vent fans close.

Turntable Control

For most cooking, the turntable should be on; however the turntable can be turned off so that it does not rotate for extra large dishes, such as the 13×9×2 glass utility casserole. Put the casserole on the turntable, press **Turntable** button to turn the turntable on or off.

NOTE: Sometimes the turntable may become too hot to press. Be careful to press the turntable.

SPECIAL FEATURES

Setting Auto Cook

For foods such as Butter, Cheese and Ice cream, it is not necessary to program the time and the cooking power. It is sufficient to indicate the type of food that you want to cook as well as the weight of this food.

1. Press the food (**Butter, Cheese or Ice cream**) pad once.
2. Use number pad "1", "2" to select the amount of food.
3. Press **Start/Add 30Sec** pad to confirm.

Sensor Cook (On some Models)

The sensor features detect the increasing humidity released during cooking. The oven automatically adjusts the cooking time to various types and amounts of food.

- Place the food in the oven and close the door. (Beeps will sound to signal error operation if door is opened.)
- After cooking for a period of time, the system will detect whether there is error, if there is error, for example, the sensor short circuit or open circuit, the system will stop automatically with the display showing E-5, beeps sound every two seconds until press Stop/Cancel pad.

Time and Auto Microwave Features

- If there is no error, the system will judge corresponding cooking time based on the steam generated by the food, after cooking for a period of time, the countdown will display on the screen.
- In order to ensure the induction effect, the oven should blow for 45s before microwave cooking.

→ POPCORN

Popcorn lets you pop commercially packaged microwave popcorn. For example you want to cook a 3.0 oz bag of microwave popcorn.

1. Place the food into the oven and close the door.
2. Press **Popcorn** pad once, the system start to cook immediately.

NOTE: The weight range is 3.0-3.5 oz. (or 99 gr.).

→ POTATO

For example you want to cook two potatoes.

1. Place potato into the oven and close the door.
2. Press **Potato** pad once, the oven will start cooking immediately.

NOTE:

- The number of serving is 1-3 potatoes (6-8 oz./each or 170-230 gr./each).
- For best result, slice the potatoes and place them on the plate before heating.

→ PIZZA

For example, you want to reheat a slices pizza.

1. Place pizza into the oven and close the door.
2. Press **Pizza** pad once, the oven will start cooking immediately.

→ BEVERAGE

For example, you want to reheat two cups of coffee.

1. Place two cups of coffee into the oven and close the door.
2. Press **Beverage** pad once, the display will cycle display “1-cup 2-cups 3- cups”
3. Press number pad “**2**” to choose two cups, the oven will start reheat 3 seconds later.

NOTE: The number of serving is 1-3cups (200ml/cup). Beverages heated with the beverage category may be very hot. Remove the container with care. After heating, the beverage may be very hot. Remove the container with care.

→ VEGGIES

1. Place the veggies into the oven and close the door.
2. Press **Veggies** pad once, the display will cycle display “No1-Fresh Veggies No2-Frozen Veggies”
3. Press number pad “**1**” to choose fresh veggies, the oven will start reheat 3 seconds later.

NOTE: The weight range is 5-24 oz. (or 150-700 gr.).

Sensor Microwave Features

→ REHEAT

For example, you want to cook pasta.

1. Place the pasta into the oven and close the door.
2. Press **Reheat** pad once, the display will cycle display "No1-Dinner Plate No2-Casserole No3-Pasta".
3. Press number pad "3" to choose pasta, the oven will start cooking 3 seconds later.

NOTE: The weight range is 5-24 oz. (or 150-700 gr.).

→ MEAT

For example, you want to cook chicken piece.

1. Place the food into the oven and close the door.
2. Press **MEAT** pad once, the display will cycle display "No1-Pork No2-Chops No3-Groud MeatNo4-Chicken Piece".
3. Press number pad "4" to choose Chicken piece, the oven will start cooking 3 seconds later.

NOTE: The weight range is 5-24 oz. (150-700gr.).

Kids Meals

Using Kids Meals lets you heat common microwave-prepared foods without needing to program times and cook power.

For Hot dogs or Frozen sandwiches:

1. Press the **Kids Meals** pad once.
2. Press number pad "2 or 4" to choose Hot dogs or Frozen sandwiches.
3. Press **Start/Add 30Sec** pad to start cooking

For Chicken nuggets or Fresh fries:

1. Press the **Kids Meals** pad once.
2. Press number pad "1 or 3" to choose Chicken nuggets or Fresh fries.
3. Press number pad "1 or 2" to choose the food weight (1 for 4 oz, 2 for 8 oz or 1 for 100gr, 2 for 200gr).
5. Press **Start/Add 30Sec** pad to start cooking.

KIDS MEALS			
Category	Press number pad	Weight	Power level
Chicken nuggets	1	4 oz. (or 100 gr)	PL-60
		8 oz. (or 200 gr)	
Hot dogs	2	1 serving	PL-60
Fresh fries	3	4 oz. (or 100 gr)	PL-60
		8 oz. (or 200 gr)	
Frozen Sandwiches	4	1 serving	PL-80

Sensor Microwave Features

Weight Defrost

The oven allows you to defrost food based on the weight entered by user. The defrosting time and power level are automatically set once the food category and the weight are programmed. The frozen food weight ranges is 1-96 oz. or 1-2715 gr.

Suppose you want to defrost ground meat (15 oz.).

1. Press **Weight Defrost** pad once.
2. Press number pad enter weight.
3. Press **Start/Add 30Sec** pad to confirm.

NOTE:

- During defrost, the oven will sound beep and pause, the display will cycle shows “Turn the food over” to remind user to turn the food over, after that, press **Start/Add 30Sec** pad to resume.
- After the last stage, small sections may still be icy. Let stand to continue thawing. Do not defrost until all ice crystals are thawed.
- Use small smooth strips of aluminum foil to cover edges and thinner sections of the food.

1Lb Defrost

This feature allows you to defrost food quickly.

In standby, press **1Lb Defrost** pad once, the system start defrosting automatically.

NOTE:

- During defrost, the oven will sound beep and pause, the display will cycle shows “Turn the food over” to remind user to turn the food over, after that, press **Start/Add 30Sec** pad to resume.
- Use small smooth strips of aluminum foil to cover edges and thinner sections of the food.

Time Defrost

If the food weight is exceed the maximum weight recommended, you need to defrost manually.

Suppose you want to defrost ground meat (12:34).

1. Press **Time Defrost** pad once, “Enter Time”and“DEF.”will cycle display.
2. Enter time by pressing the number pad **1, 2, 3 and 4**.
3. Press **Start/Add 30Sec** pad to confirm.

NOTE:

- During defrost, the oven will sound beep and pause, the display will cycle shows “Turn the food over” to remind user to turn the food over, after that, press **Start/Add 30Sec** pad to resume.
- Please remember to place the food on a microwave-safe dish not in a plastic container

Sensor Microwave Features

OTHER CONVENIENT FEATURES

Add 30Sec

In standby mode, simply press the **Start/Add 30Sec** pad repeatedly to set cook time and the oven will start cooking immediately at 100% power level.

NOTE: You can also extend cooking time(except sensor cook, auto cook, defrost) by pressing the **Start/Add 30Sec** during cooking for add 30 seconds each press up to 99 minutes and 99 seconds.

Express Cooking (On Some Models)

In standby mode, press one of number pad from 1~6, the system will start cooking automatically at 100% power level.

Setting the Timer

Suppose you want to cooking food 3 minutes later.

1. In standby mode, press **Timer** pad once, "Enter Kitchen Timer" will cycle display.
2. Use the number pads to enter time.
3. Press **Start/Add 30Sec** pad

NOTE:

- During the cooking process, you cannot set the Timer function.
- Once you have set the timer function, in either cooking or standby mode, you can check the countdown by press Timer pad and you can press Stop/Cancel to cancel the timer function when the display shows timer time..

Eco Mode

In standby, press **Eco Mode** pad. Oven turn to the lowest power consumption mode and screen is blank until you press any pad.

My Setting Function (On Some Models)

My setting provides hints for 3 features which make it easy to use the oven because specific instructions are provided in the Interactive Display.

In standby mode, press **My Setting** pad once, the screen will cycle show "No1-Weight Mode Selected No2-Sound On/Off Control No3- Daylight Saving Time", and then according to the corresponding numbers (1~3) to select the corresponding settings.

WEIGHT UNIT SETTING HINT

Your oven has two units of weight you can to choose, following the steps:

1. In standby, press **My Setting** once
2. Press number pad 1 to enter the weight unit setting. The display will show "1-gr 2-oz".
3. You can press number pad **1** to select "gr" for weight unit, "1-gr" will display or number pad **2** to select "oz" for weight unit, "2-Oz" will display.

Sensor Microwave Features

DAYLIGHT SAVE TIME HINT

1. In standby, press **My Setting** once.
2. Press number pad 3 to enter the Daylight Saving Time setting.
3. Use the number pad to enter the new clock time, and then press **Start/Add 30Sec** to confirm the present clock.

SOUND ON/OFF

1. In standby, press **My Setting** once.
2. Press number pad **2** to enter the Key-touch beep setting. You can press number pad **1** to select sound on, "1-On" will display. If you want to have the oven operate with no audible signals, press number pad **2** to select sound off, "2-off" will display.

NOTE: The default startup state: SOUND to On, WEIGHT UNIT for oz, DAYLIGHT SAVE TIME to Blank.

Child Lock

The child lock prevents unsupervised operation by children and this program only works in standby mode. To set, in standby mode, press and hold **Stop/Cancel** for 3 seconds. Lock is indicated on the display. To cancel, press and hold **Stop/Cancel** for 3 seconds. Lock indication disappears.

CLEAR AND CARE

Light


To replace light bulbs, first disconnect power to the oven at the circuit breaker panel or by unplugging.

To release cover, remove the screw on the light cover. (See illustration.)

DO NOT USE A BULB LARGER THAN 30 WATTS.

Close light cover and secure with screw removed in step 2.

CAUTION: Light cover may become very hot. Do not press glass when light is on.

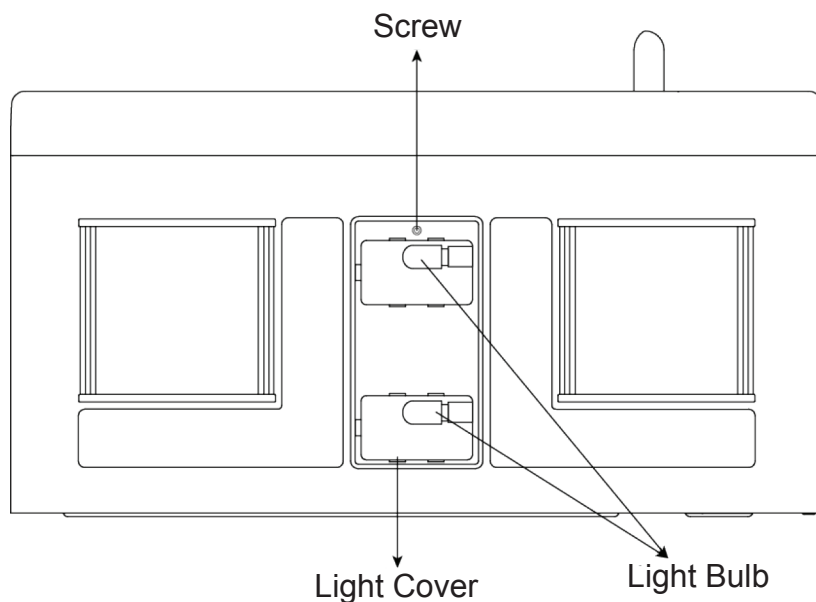


Other Features

Charcoal Filter

Charcoal filter is used for nonvented, recirculated installation. The filter should be changed every 6 to 12 months depending on use.


- Disconnect power to the oven at the circuit breaker panel or by unplugging.
- Remove the louver mounting screw from the top center of the louver and push down carefully on the tab at each end of the louver to disengage it. (See illustration.)
- Pull the louver away from the unit.
- Change the charcoal filter.
- Carefully push the louver back into place and replace the screw remove in step 2.

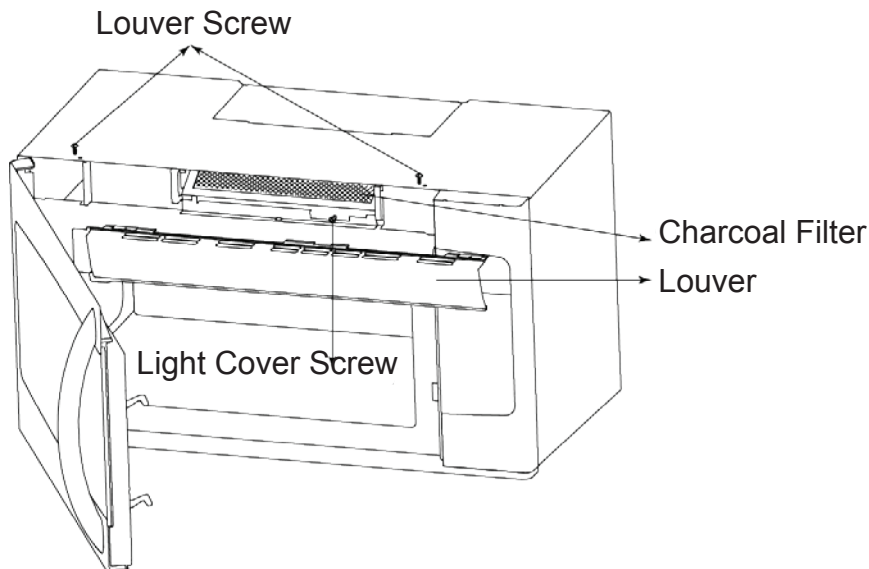

Oven Light

Remove the louver per instructions 1~3 above and charcoal filter, if used.

- Open light cover located behind filter mounting by carefully pulling up on the front edge.

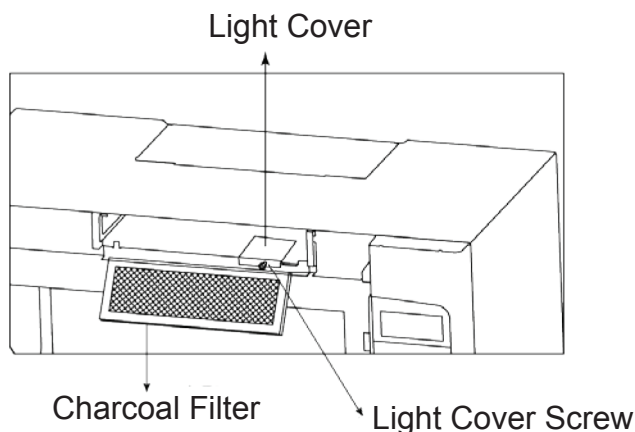

- DO NOT USE A BULB LARGER THAN 30 WATTS.
- Replace the oven light cover by carefully pushing into place. Replace the charcoal filter, if used. Push the louver back into place and replace the louver mounting screw.

Microwave Terms

Term	Definition
Arcing	<p>Arcing is the microwave term for sparks in the oven. Arcing is caused by:</p> <ul style="list-style-type: none"> ■ metal or foil touching the side of the oven. ■ foil that is not molded to food (upturned edges act like antennas). ■ metal such as twist-ties, poultry pins, gold-rimmed dishes. ■ recycled paper towels containing small metal pieces. ■ plates or dishes with a metallic trim or glaze with a metallic sheen.
Covering	Covers hold in moisture, allow for more even heating and reduce cooking time. Venting plastic wrap or covering with wax paper allows excess steam to escape.
Shielding	In a regular oven, you shield chicken breasts or baked foods to prevent over-browning. When microwaving, you use small strips of foil to shield thin parts, such as the tips of wings and legs on poultry, which would cook before larger parts.
Standing Time	When you cook with regular ovens, foods such as roasts or cakes are allowed to stand to finish cooking or to set. Standing time is especially important in microwave cooking. Note that a microwaved cake is not placed on a cooling rack.
Venting	After covering a dish with plastic wrap, you vent the plastic wrap by turning back one corner so excess steam can escape.

Care and Cleaning

Helpful Hints

An occasional thorough wiping with a solution of baking soda and water keeps the inside fresh.

Be certain the oven control is turned off before cleaning any part of this oven.




How to Clean the Inside

Walls, Floor, Inside Window, Metal and Plastic Parts on the Door


Some spatters can be removed with a paper towel; others may require a damp cloth. Remove greasy spatters with a sudsy cloth, then rinse with a damp cloth. Do not use abrasive cleaners or sharp utensils on oven walls.

Never use a commercial oven cleaner on any part of your microwave.

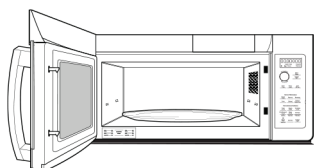

Removable Turntable and Turntable Support

To prevent breakage, do not place the turntable into water just after cooking. Wash it carefully in warm, sudsy water or in the dishwasher. The turntable and support can be broken if dropped. Remember, do not operate the oven in the microwave mode without the turntable and support seated and in place.

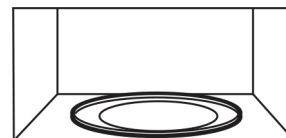

How to Clean the Outside

We recommend against using cleaners with ammonia or alcohol, as they can damage the appearance of the microwave oven. If you choose to use a common household cleaner, first apply the cleaner directly to a clean cloth, then wipe the soiled area.

Case

Clean the outside of the microwave with a sudsy cloth. Rinse and then dry. Wipe the window clean with a damp cloth.

Control Panel

Wipe with a damp cloth. Dry thoroughly. Do not use cleaning sprays, large amounts of soap and water, abrasives or sharp objects on the panel—they can damage it. Some paper towels can also scratch the control panel.

Door Panel

Before cleaning the front door panel, make sure you know what type of panel you have. Refer to the eighth digit of the model number. “S” is stainless steel, “L” is CleanSteel and “B”, “W” or “C” are plastic colors.

Stainless Steel (on some models)

The stainless steel panel can be cleaned with Stainless Steel Magic or a similar product using a clean, soft cloth. Apply stainless cleaner carefully to avoid the surrounding plastic parts. Do not use appliance wax, polish, bleach or products containing chlorine on Stainless Steel finishes.

Plastic Color Panels


Use a clean, soft, lightly dampened cloth, then dry thoroughly.

Door Seal

It's important to keep the area clean where the door seals against the microwave. Use only mild, non-abrasive detergents applied with a clean sponge or soft cloth. Rinse well.

Bottom

Clean off the grease and dust on the bottom often. Use a solution of warm water and detergent.

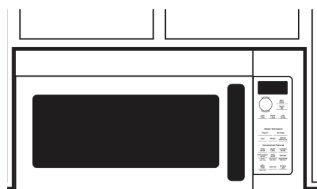

Troubleshooting Tips... Before you call for service

Save time and money! Review the charts on the following pages first and you may not need to call for service.

Problem	Possible Cause	What To Do
Oven will not start	A fuse in your home may be blown or the circuit breaker tripped.	Replace fuse or reset circuit breaker.
	Power surge.	Unplug the microwave oven, then plug it back in.
	Plug not fully inserted into wall outlet.	Make sure the 3-prong plug on the oven is fully inserted into wall outlet.
	Door not securely closed.	Open the door and close securely.
Floor of the oven is warm even when the oven has not been used	Heat from the cooktop light may make the floor get warm.	This is normal.
You hear an unusual lowtone beep	You have tried to change the power level when it is not allowed.	Many of the oven's features are preset and cannot be changed.
Food amount too large for Sensor Reheat	Sensor Reheat is for single servings of recommended foods	Use TIME COOK for large amounts of food

Things That Are Normal With Your Microwave Oven

- Steam or vapor escaping from around the door.
- Dimming oven light and change in the blower sound at power levels other than high.
- Light reflection around door or outer case.
- Dull thumping sound while oven is operating.

FEDERAL COMMUNICATIONS COMMISSION (U.S.A.) RADIO FREQUENCY INTERFERENCE STATEMENT

This equipment generates and uses ISM frequency energy and if not installed and used properly, that is in strict accordance with the manufacturer's instructions, may cause interference to radio and television reception. It has been type tested and found to comply with limits for an ISM Equipment pursuant to part 18 of FCC Rules, which are designed to provide reasonable protection against such interference in a residential installation. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause interference to radio or television reception, which can be determined by tuning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following:

- Reorient the receiving antenna of radio or television.
- Relocate the Microwave oven with respect to the receiver.
- Move the microwave oven away from the receiver.
- Plug the microwave oven into a different outlet so that microwave oven and receiver are on different branch circuits.

The manufacturer is not responsible for any radio or TV interference cause by unauthorized modification to this microwave oven. It is the responsibility of the user to correct such interference.

GE Appliances Microwave Oven Warranty

GEAppliances.ca

All warranty service is provided by our Factory Service Centers, or an authorized Customer Care® technician. To schedule service online, visit us at www.geappliances.ca/en/support/service-request/, or call GE Appliances at 800.561.3344. Please have your serial number and your model number available when calling for service.

For the period of	GE Appliances will replace
One year From the date of the original purchase	Any part of the oven which fails due to a defect in materials or workmanship. During this limited one-year warranty , GE Appliances will also provide, free of charge , all labor and related service costs to replace the defective part when the unit is serviced.

What GE Appliances will not cover:

- Service trips to your home to teach you how to use the product.
- Improper installation, delivery or maintenance. If you have an installation problem, contact your dealer or installer. You are responsible for providing adequate electrical, exhausting, and other connecting facilities.
- Failure of the product or damage to the product if it is abused, misused (for example, cavity arcing from wire rack or metal/foil), or used for other than the intended purpose or used commercially.
- Replacement of house fuses or resetting of circuit breakers.
- Damage to the product caused by accident, fire, floods or acts of God.
- Incidental or consequential damage caused by possible defects with this appliance.
- Damage caused after delivery.
- Product not accessible to provide required service.
- Service to repair or replace light bulbs, except for LED lamps.
- Damage to the finish, such as surface rust, tarnish, or small blemishes not reported within 48 hrs of delivery.

EXCLUSION OF IMPLIED WARRANTIES

Your sole and exclusive remedy is product repair as provided in this Limited Warranty. Any implied warranties, including the implied warranties of merchantability or fitness for a particular purpose, are limited to one year or the shortest period allowed by law.

This warranty is extended to the original purchaser and any succeeding owner for products purchased for home use within Canada. If the product is located in an area where service by a GE Appliances Authorized Servicer is not available, you may be responsible for a trip charge or you may be required to bring the product to an Authorized GE Appliances Service location for service.

Some Provinces or Territories do not allow the exclusion or limitation of incidental or consequential damages. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state. To know what your legal rights are, consult your local Member of Parliament consumer affairs office.

Warrantor: MC Commercial Inc.

Staple your receipt here. Proof of the original purchase date is needed to obtain service under the warranty.

Consumer Support

GE Appliances Website

Have a question or need assistance with your appliance? Try the GE Appliances Website 24 hours a day, any day of the year! You can also shop for more great GE Appliances products and take advantage of all our on-line support services designed for your convenience. In Canada: **GEAppliances.ca**

Register Your Appliance

Register your new appliance on-line at your convenience! Timely product registration will allow for enhanced communication and prompt service under the terms of your warranty, should the need arise. You may also mail in the pre-printed registration card included in the packing material. In the US:

GEAppliances.ca/en/support/ register-your-appliance

Schedule Service

Expert GE Appliances repair service is only one step away from your door. Get on-line and schedule your service at your convenience any day of the year. In Canada: **GEAppliances.ca/en/support/service-request** or call 800.561.3344 during normal business hours.

Parts and Accessories

Individuals qualified to service their own appliances can have parts or accessories sent directly to their homes (VISA, MasterCard and Discover cards are accepted). Contact your local authorized GE Appliances parts distributor for more information or call us by phone at 800.561.3344 during normal business hours.

Instructions contained in this manual cover procedures to be performed by any user. Other servicing generally should be referred to qualified service personnel. Caution must be exercised, since improper servicing may cause unsafe operation.

Contact Us

If you are not satisfied with the service you receive from GE Appliances, contact us on our Website with all the details including your phone number, or write to:

In Canada: Director, Consumer Relations, MC Commercial Inc | Suite 310,1 Factory Lane | Moncton, N.B. E1C 9M3
GEAppliances.ca/en/contact-us